




P.O. Box 68323, Bryanston 2021
200 Cussonia Park, 3 Ridge Road,
Laser Park, Honeydew, South Africa.
Tel: (011) 794-6311 • Fax: (011) 794-6233

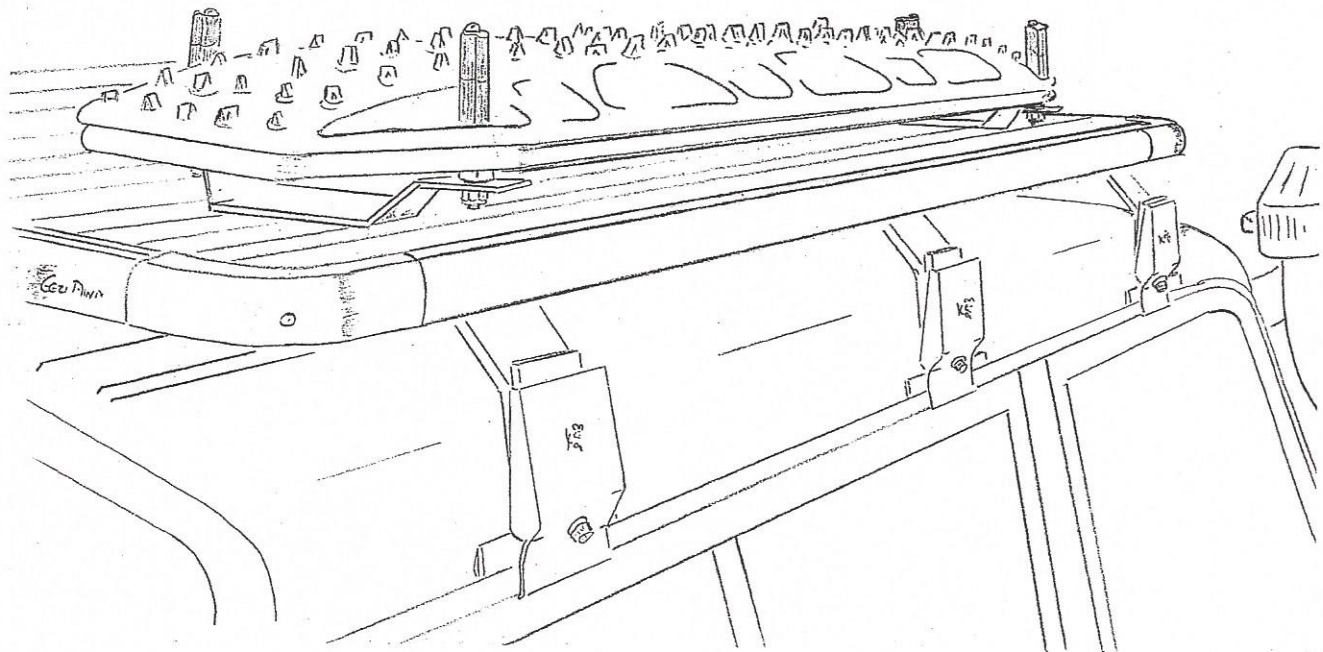


INSTALLATION WARNING:

1. It is important that all K9 Racks and accessories are correctly attached (fastened) and secured to your vehicle.
2. Negligent installation of the K9 Rack and accessories could lead to an unfortunate vehicle accident. Furthermore injury and cause bodily harm or even lead to the demise of other folk.
3. Remember you are personally responsible in securing and checking the installation of your K9 Rack on your vehicle.
4. Once fitted the K9 Rack installation should be checked on a regular basis and if need be adjusted or secured.
5. Before you commence installation of your K9 Rack it is imperative that you read the instructions thoroughly to understand and be prepared for the assembly.
6. Should you not fully understand the assembly and installation instructions of the K9 Rack and you are apprehensive that you do not have the technical or mechanical know-how it would be in your interest to have the K9 Rack installed by a qualified professional at a garage or fitment centre.
7. Lastly it is extremely important that your equipment including the weight of the K9 Rack does not exceed your vehicles maximum roof load specifications.
8. In order to obtain your vehicle specifications one would need to contact your vehicle manufacturer or distributor or look in your service book provided with your vehicle.




INSTALLATION INSTRUCTIONS OF THE K9 MAX TRAX BRACKET


GETTING STARTED:
13mm spanner wrench
17mm spanner wrench
22mm spanner wrench
Max trax mounting kit optional extra
Pad lock not supplied

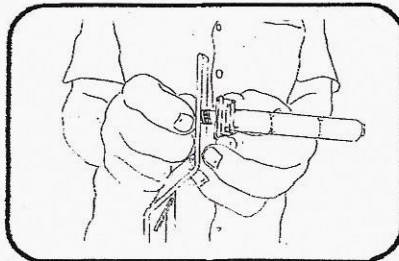


Attach the Max Trax Pins to the K9 bracket.

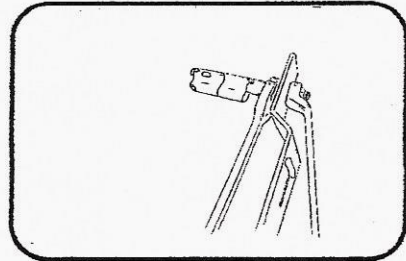


Secure with 17mm and 22mm spanner wrench

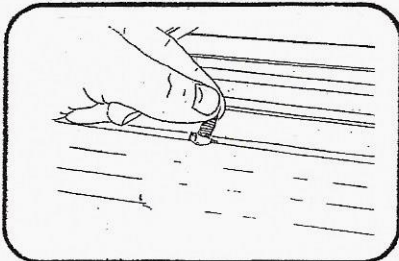


Slide bolts into groves on slats.

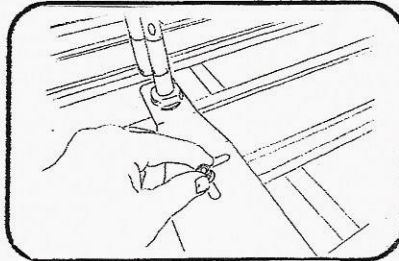


Place K9 bracket on rack and thread on nyloc nut onto bolts.

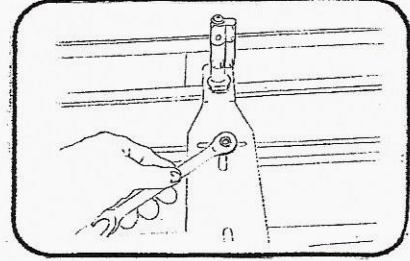


Tighten with 13mm spanner wrench.

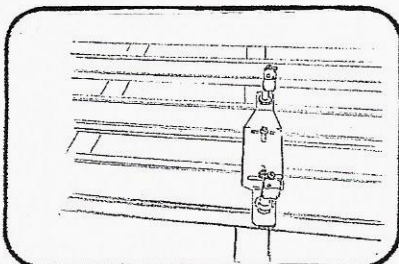


Do the same with the front K9 barcket but leave the bolts loose so as it can slide.

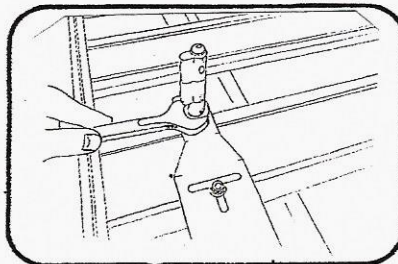


Turn the Max Trax Pins so as they a line with Max Trax holes.

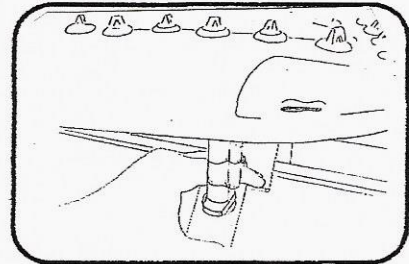


Place the Max Trax onto K9 brackets and slide front K9 bracket so as holes a line. Secure with 13mm spanner wrench.

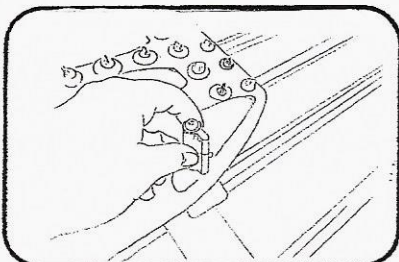

Turn Max Trax Pins in order to secure Max Trax to K9 bracket it.

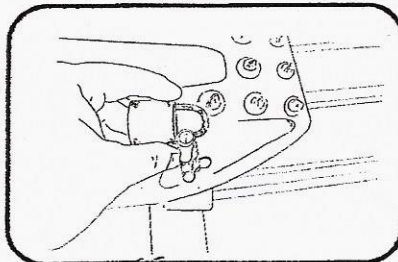

It is very important to padlock Max Trax onto K9 bracket at all times.

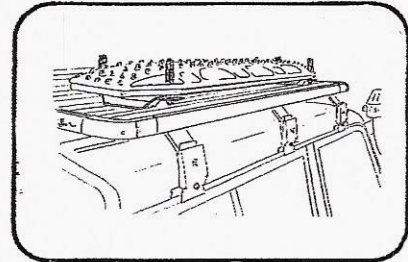

JOB WELL DONE!