




P.O. Box 68323, Bryanston 2021
200 Cussonia Park, 3 Ridge Road,
Laser Park, Honeydew, South Africa.
Tel: (011) 794-6311 • Fax: (011) 794-6233



SINGLE JERRYCAN HOLDER INSTALLATION AND OPERATING INSTRUCTIONS

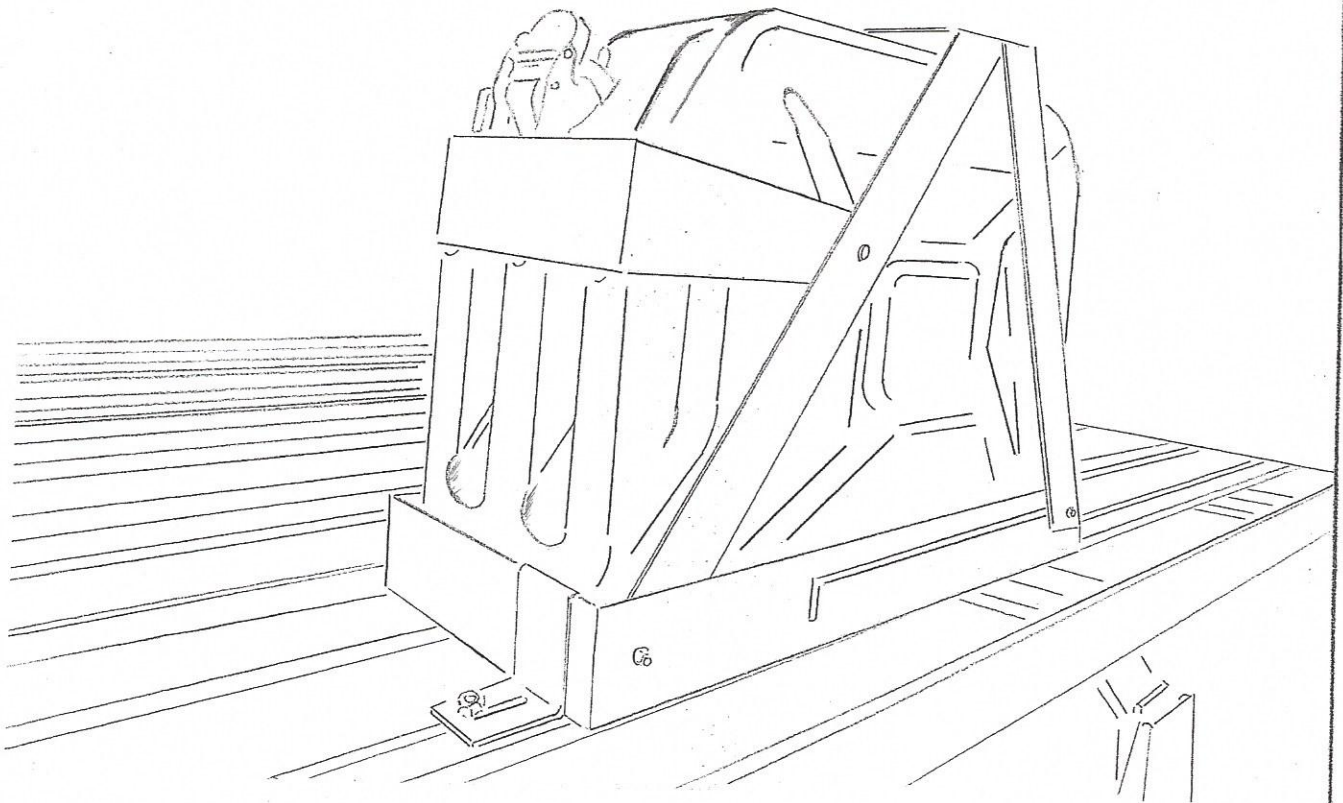

INSTALLATION WARNING:


1. It is important that all K9 Racks and accessories are correctly attached (fastened) and secured to your vehicle.
2. Negligent installation of the K9 Rack and accessories could lead to an unfortunate vehicle accident. Furthermore injury and cause bodily harm or even lead to the demise of other folk.
3. Remember you are personally responsible in securing and checking the installation of your K9 Rack on your vehicle.
4. Once fitted the K9 Rack installation should be checked on a regular basis and if need be adjusted or secured.
5. Before you commence installation of your K9 Rack it is imperative that you read the instructions thoroughly to understand and be prepared for the assembly.
6. Should you not fully understand the assembly and installation instructions of the K9 Rack and you are apprehensive that you do not have the technical or mechanical know-how it would be in your interest to have the K9 Rack installed by a qualified professional at a garage or fitment centre.
7. Lastly it is extremely important that your equipment including the weight of the K9 Rack does not exceed your vehicles maximum roof load specifications.
8. In order to obtain your vehicle specifications one would need to contact your vehicle manufacturer or distributor or look in your service book provided with your vehicle.




**MOUNTING A K9 JERRY CAN HOLDER
ONTO A ROOF RACK:**

GETTING STARTED:


13mm spanner, wrench

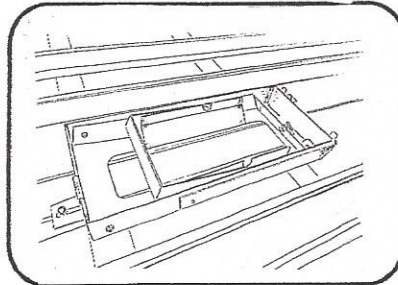


Remove from box and place on rack in mountable position.

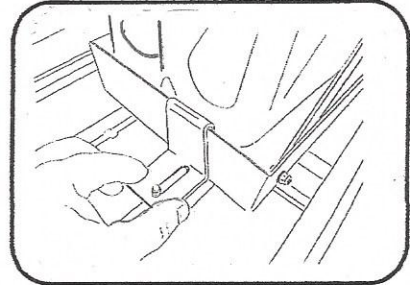


Slide bolts into grooves on slat and place hook plate over edge of holder.

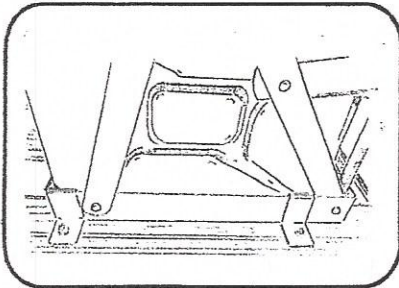


Should you wish to mount holder on the sides refer to above diagram in order to secure hook plates.

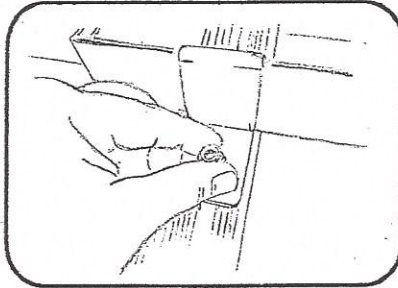


Thread on nyloc nut onto bolts.

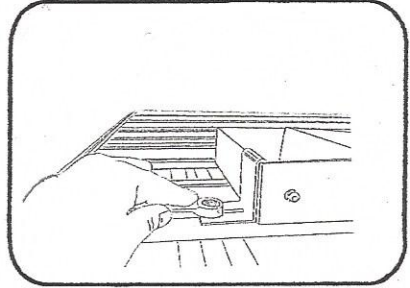


Tighten with 13mm spanner, wrench.

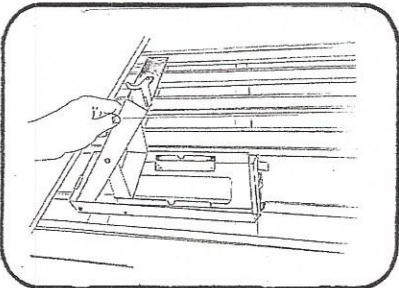


Take hold of arm with latch and raise.

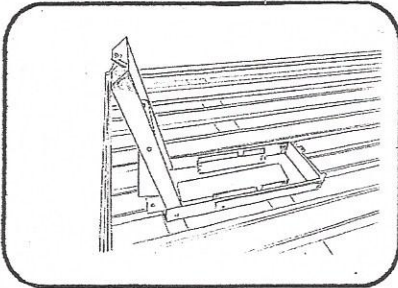


Leave in open position.

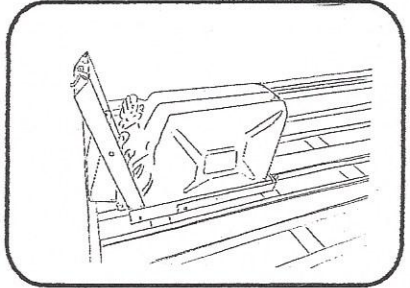


Place jerry cans into holder

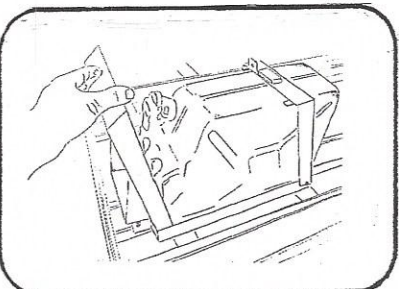

Raise secondary arm into position.

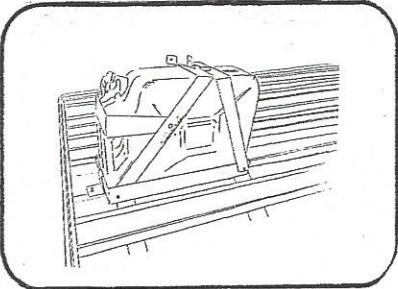

Bring both arms together.

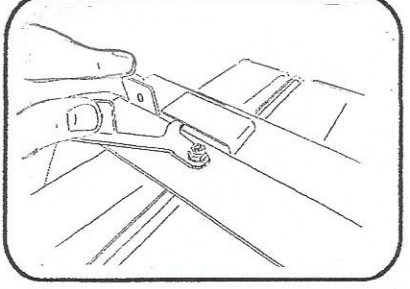

Close latch. **JOB WELL DONE.**