



## 2016 HILUX REVO TRACK FITTING INSTRUCTIONS.

### GETTING STARTED:


Pencil  
Hacksaw  
Sharp knife  
5mm drill bit + Drill  
Poprivet gun  
Vacuum cleaner  
Small tube silicone  
13mm spanner wrench  
Tape measure.

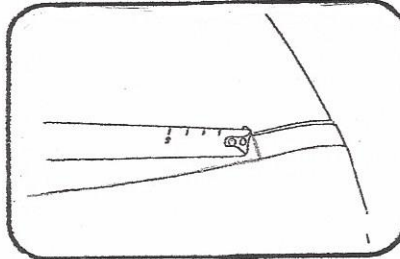


Measure 50 mm on rubber strip  
From prominent line in roof rubber .

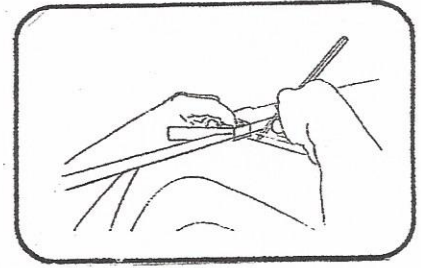


Draw a line with a pencil to mark the spot.

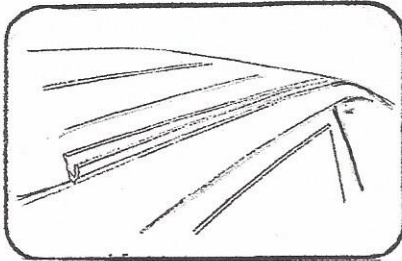


Place the track onto the roof align with the mark just made check you are happy with the position of the track.

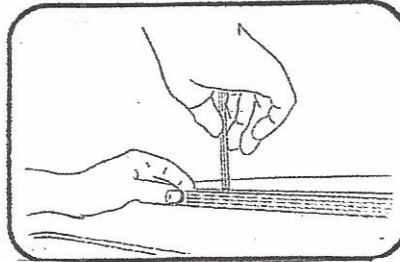


This should be aligned with pencil mark at the back.

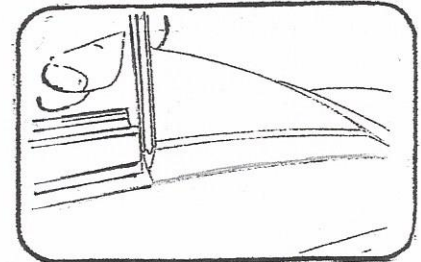


Mark the rubber strip in the front in order to cut out rubberstrip to accommodate track.

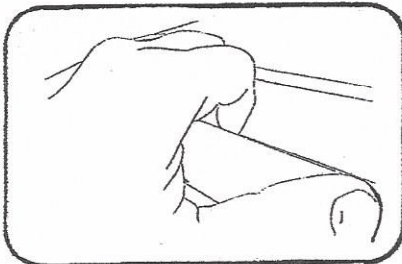


Pry rubber strip from roof.

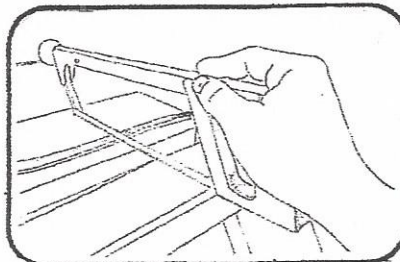


Cut rubber strip with a hacksaw using a polystyrene block or similar to protect vehicle roof when cutting.

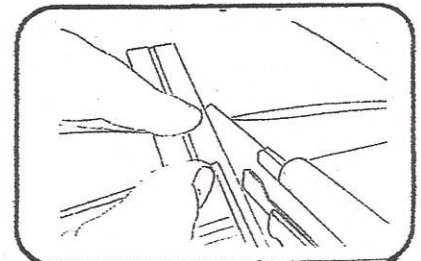


Alternatively a sharp knife can be used with a straight edge .

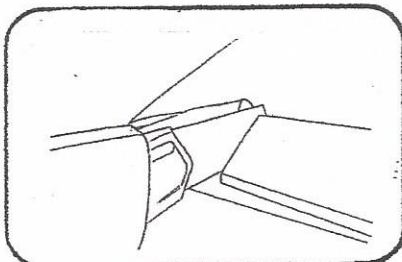

Cut through the rubber until you hit the steel insert.

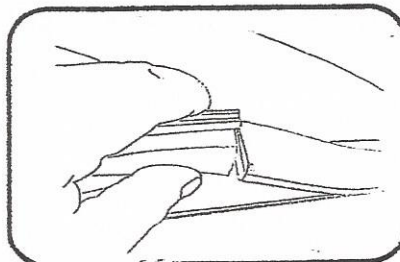


Twist strip to brake off steel insert once cut with knife.

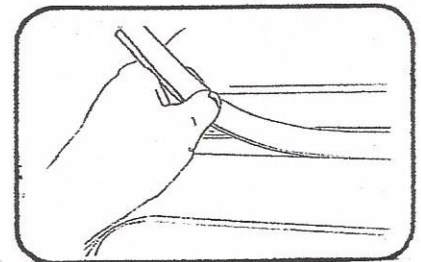


Remove rubber strip from roof by pulling upwards.




## 2016 HILUX REVO TRACK FITTING INSTRUCTIONS.

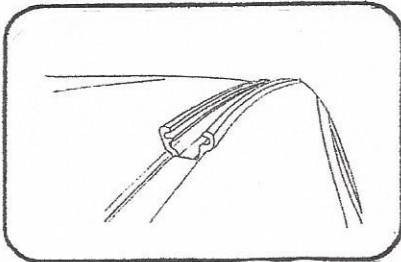


Place track down in slot now created.

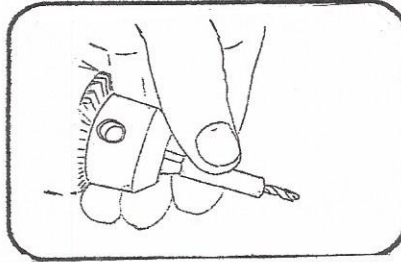


It is important to place tape around drill bit in order to stop the drill going too deep the drill should only protrude a maximum of 10mm.

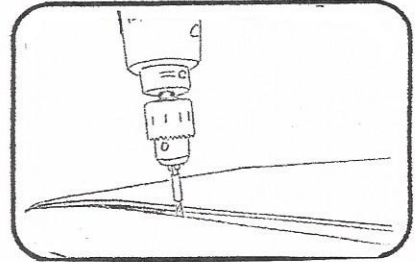


Mark the positions of the holes with a drill through the track remove the track and finish drilling.

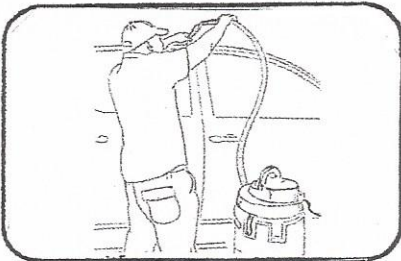


Vacuum out all loose particles.

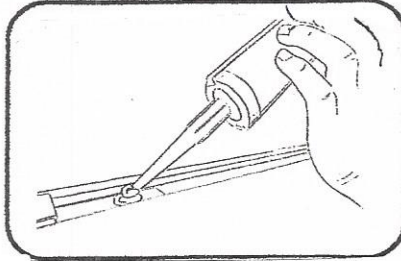


Place a small bead of Silicone around holes.

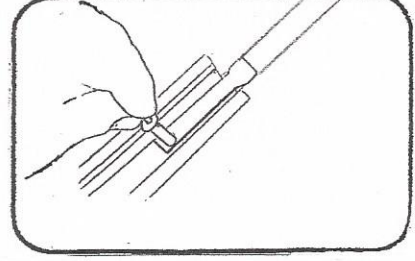


Put the poprivets in place as with rubber strip cover plate

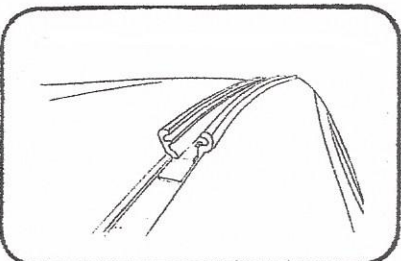


Track in slot with rubber strip cover plate.

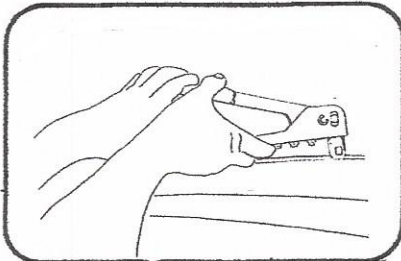


Poprivet track in place with poprivet gun.

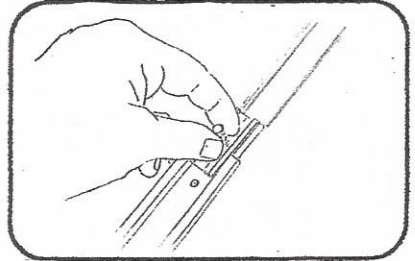

Slide mounting plates into track.

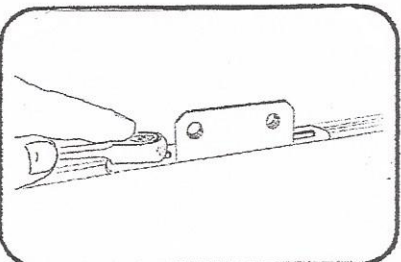

Attach k9 foot and adjust to align with roof rack to be fitted secure with 13mm spanner wrench.

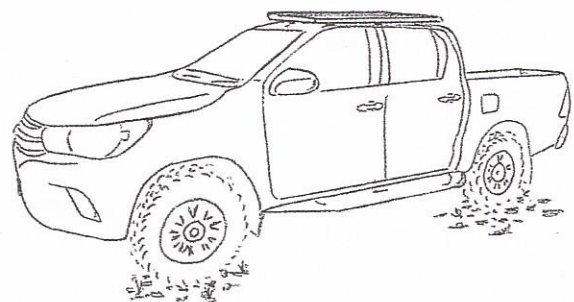

**JOB WELL DONE!**

Eezi-Awn reserves the right to modify their equipment at their own discretion.