



Eezi-Awn


EEZI AWN SERIES 2000 REC VEE KIT INSTALATION INSRUCTIONS.

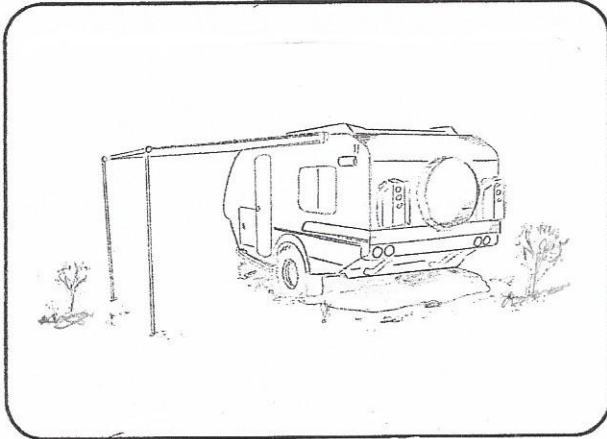


Remove BAT Open awning up place it face down

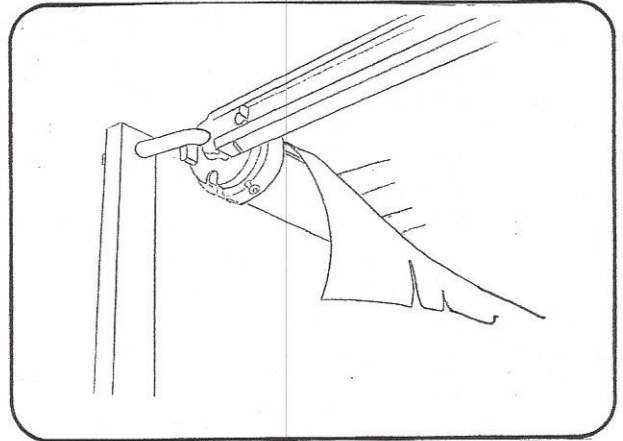


Release arm so as groove in roller faces down

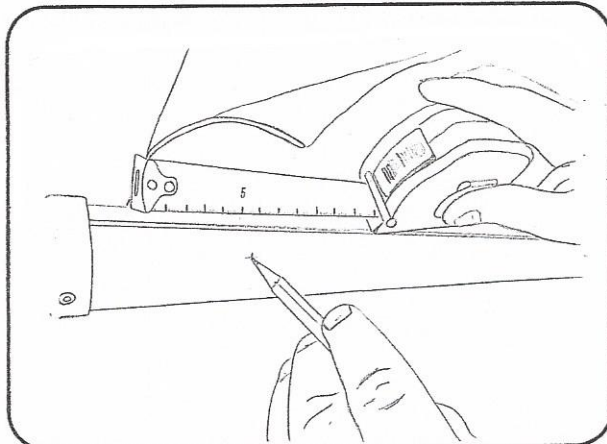


Mark awning roller with a pencil 50mm in from fabric and the Left and Right hand side.

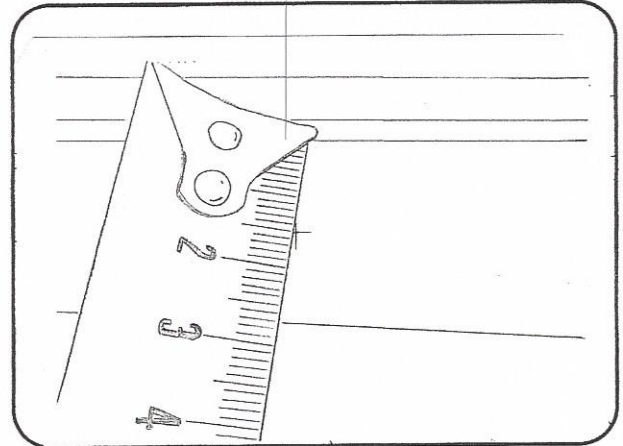

15mm down from groove in roller

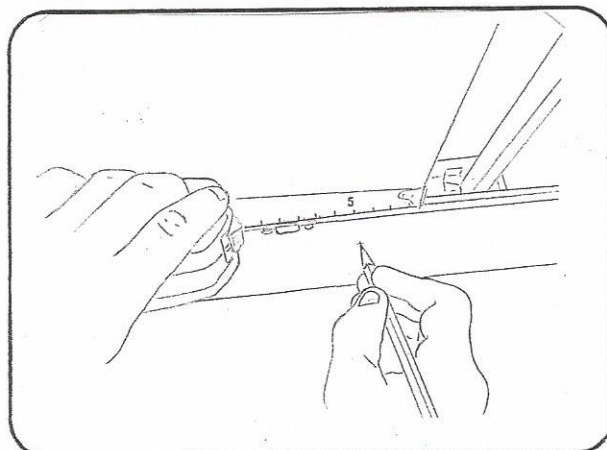


Mark awning cover with a pencil 50mm in from fabric on the left and right hand side.

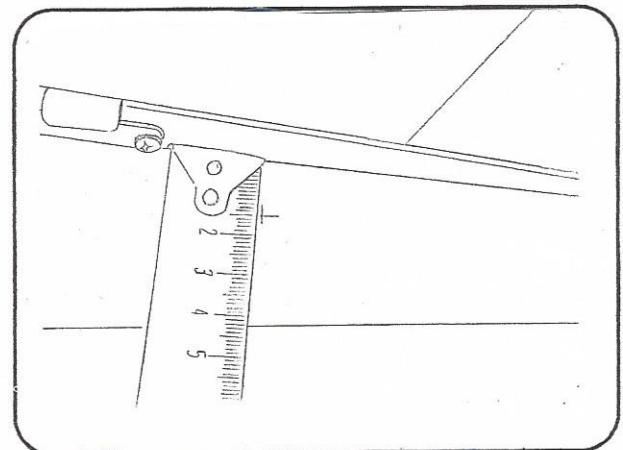


15 mm down from awning cover lip.


Eezi-Awn

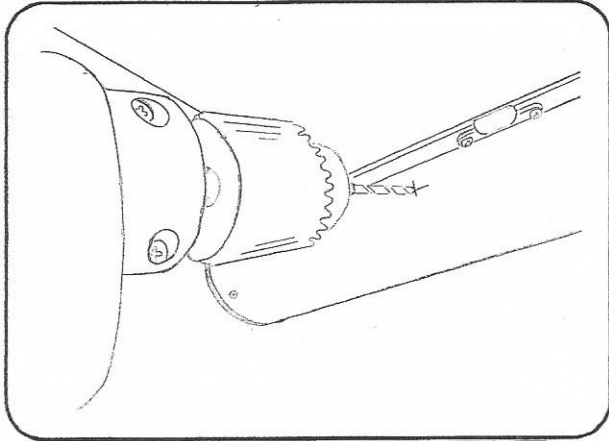


Drill a small hole first and then finish with a 6.5 mm drill bit in the cover.

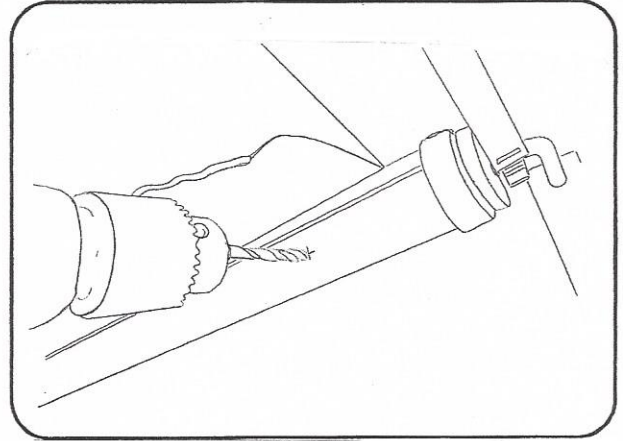


Repeat in the roller and all four holes marked.

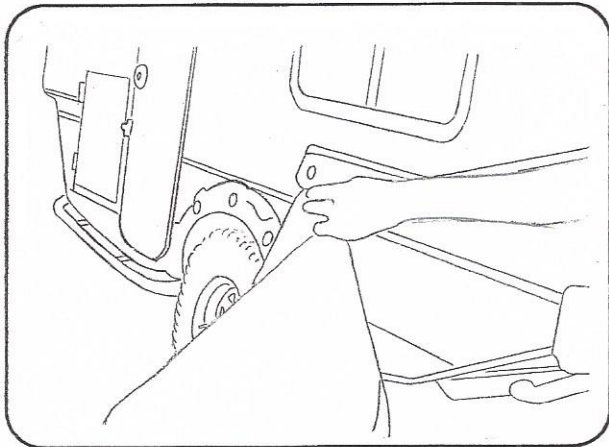


Slide pole through groove in panel.

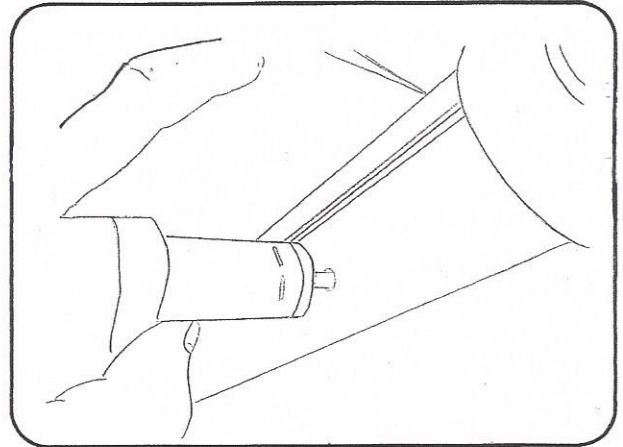

Push pole nib into holes drilled in cover and roller.

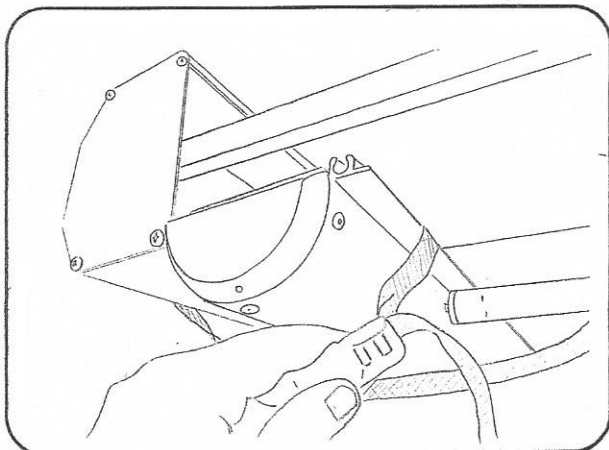

Place panel strap around awning casing clip together.
Slide front panel into groove on roller zip the panels together.

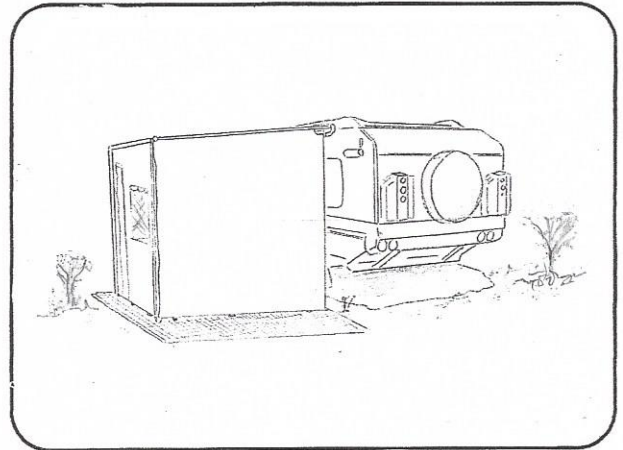

Job well done!!!!