




# Eezi-Awn

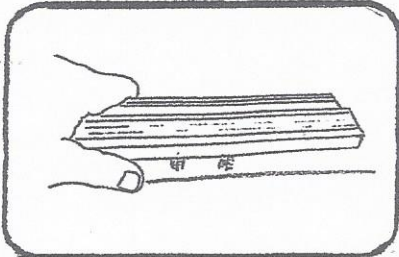


Press downwards to a line

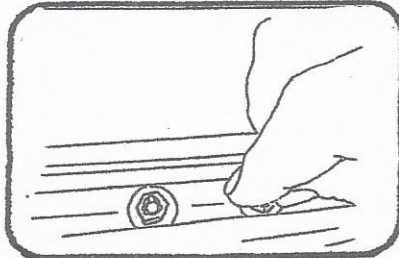


Secure with nuts removed and hand tighten.

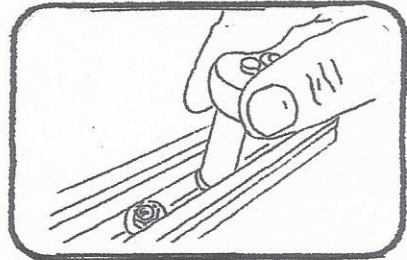


Tighten nuts with 10mm Socket wrench at the front and back.

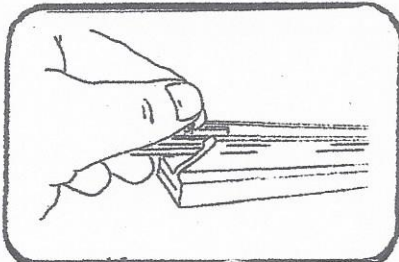


Slide aluminium plate into K9 track.

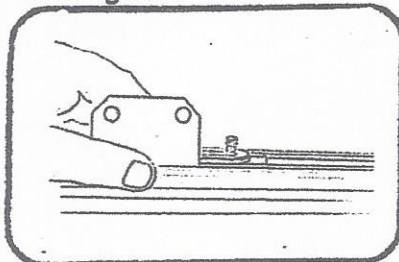


Place bottom foot on K9 track.

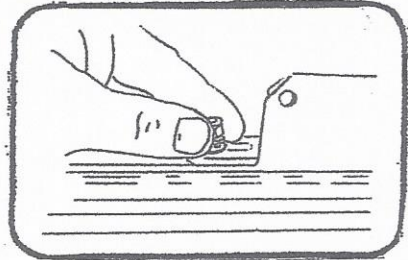


Thread nylock nuts onto thread.

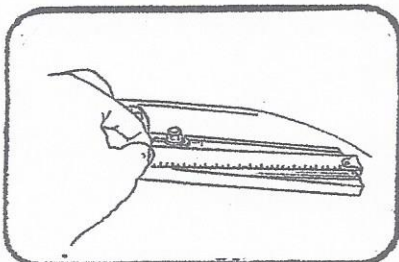

Measure between the legs to align with roof rack load bars.

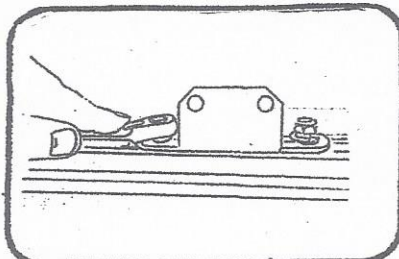


Tighten bottom foot with 13mm spanner /wrench.

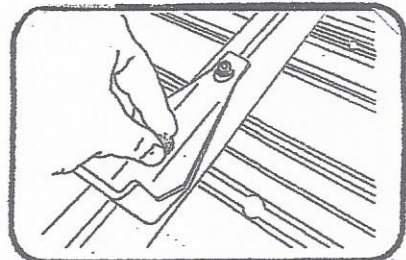

Refer to Section 2 in order to mount rack.

Job Well Done!!!!

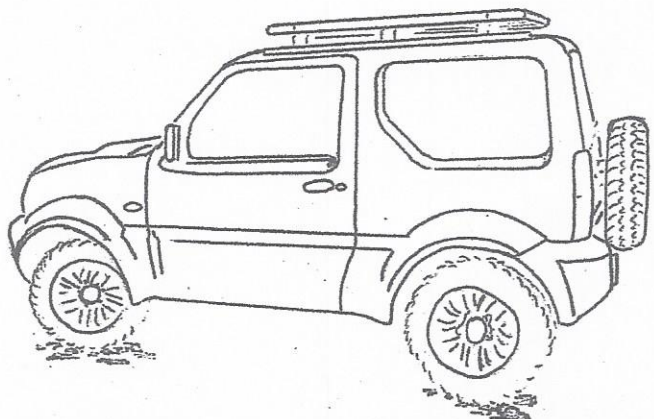





**GETTING STARTED:**

10mm Socket Wrench  
13mm Spanner Wrench  
5mm Allen key  
Cloth


**MOUNTING K9 TRACKS ONTO A SAZUKI JIMNY REFER TO SECTION 2 WITH REGARDS TO MOUNTING THE RACK:**

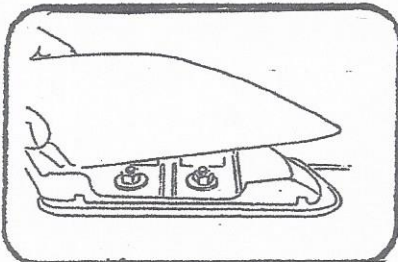


Unclip and remove plastic cover caps.

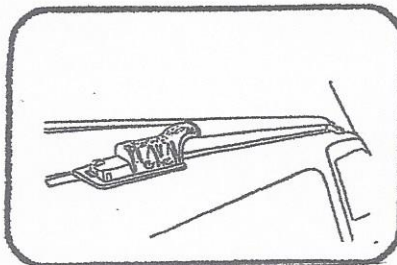


OEM bars one plastic covers have been removed.

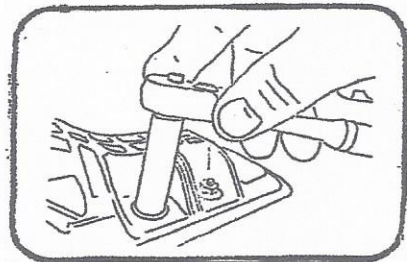


Use a 10mm Socket Wrench to loosen securing nuts.

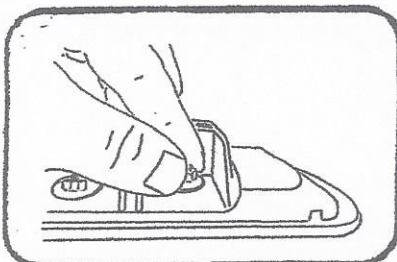


Remove and keep in a safe place as these will need to be used again.

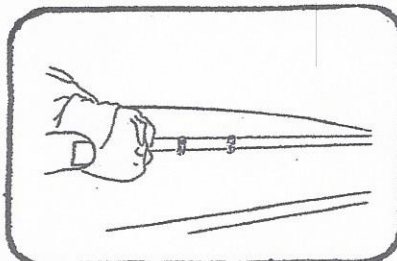


Wipe off the vehicles roof with a cloth.

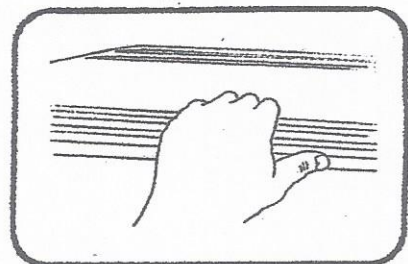


Place K9 track down on vehicles roof.

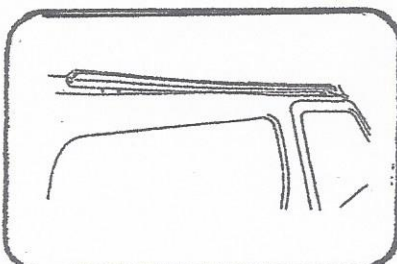

The K9 track will curve upwards one placed.

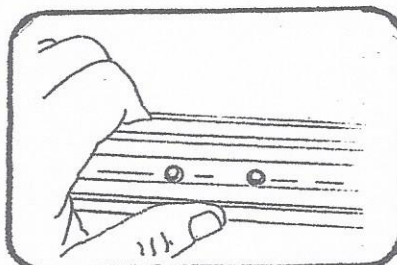

A line holes in the K9 track with studs on vehicles roof.

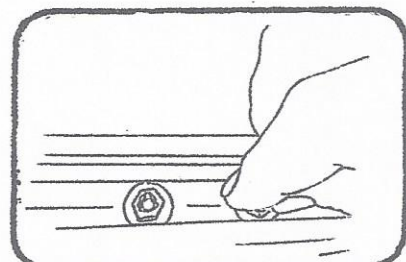

Secure with nuts remove and hand tighten.